

How to change batteries

Regarding battery exchange for ed lock PLUS

① Checking if the battery level is low



• **The device itself**
When the battery becomes low, the battery replacement lamp flashes when the start button is pressed. Also, before locking and unlocking, it sounds "beep-, beep-, beep-"



• The HomeHub App

The remaining battery level will be displayed on the app settings screen.




※Battery information will be updated when you perform smart lock operations (communications) using the app.

電池残量表示	電池の残量
	ほぼいっぱい容量があります
	容量が少なくなりました
	容量がほとんどありません。

② The battery replacement

1. Please prepare 4 AA lithium batteries.*The battery pack is attached to the bottom of the main unit on the outside.

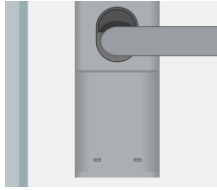


2. To unlock the battery cover, start "Battery Replacement Mode" from the homehub app by following the steps below.



Tap the background illustration on the home screen



Tap "About battery replacement" on the settings screen

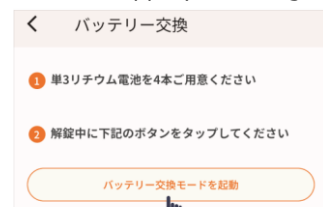


Tap "Start battery replacement mode"

3. Remove the battery cover from the main unit within 10 seconds.



You will hear a "click" sound and the lock will be released.

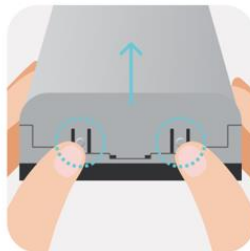

To remove the battery cover, gently push up on the protrusion on the bottom and pull it toward you.




Remove the battery case by hooking your finger on the underside and gently pulling it toward you.

4. Remove the battery case and replace the batteries.



《Battery standard used》
AA type alkaline battery, AA type lithium battery
We recommend using lithium batteries as performance will differ in low-temperature environments.

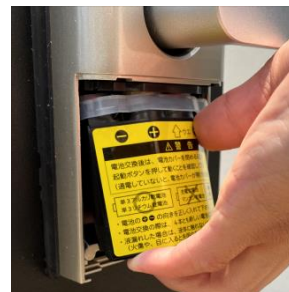

Place your finger on the underside of the battery case and gently pull it forward to remove the battery case from the main unit.

Please replace with new batteries.
Replace all 4 with new ones.

Place the battery case into the main unit.



Press the start button to check that it is working properly, and if there is no problem, attach the battery cover.

③ About when the app cannot be operated

If you cannot start "Battery Replacement Mode" from the app, remove the battery cover using the following method.

1. There is a gap of about 1mm in the middle of the bottom of the device, so fold the paper (receipt, sticky note, etc.) and insert it.



2 With the paper inserted, press the protrusion on the bottom (on one side) and pull it toward you.



Push up on the knob from below to unlock the battery cover and remove it.