

How to change batteries

Regarding battery exchange for bitreader+ / bitlock MINI

① Checking if the battery level is low

1. Low battery alert



・The device itself

When the battery level is low, the entire LED will flash red 4 times while a beeping sound will be heard during operation.



・ HomeHubアプリ

An alert will appear on the screen when the battery level is low.




2. Checking the remaining battery level (You can check the remaining battery level from the HomeHub app)

***Battery information will be updated when you perform smart lock operations (communications) using the app.**

① Launch the homehub app and tap "Device Name."




② Select "bitreader+" or "bitlock MINI" from the device list.

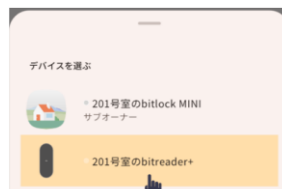

③ Check the remaining battery level from the settings screen of each device.

電池残量表示	電池の残量
	ほぼいっぱい容量があります
	容量が少なくなりました
	容量がほとんどありません。。

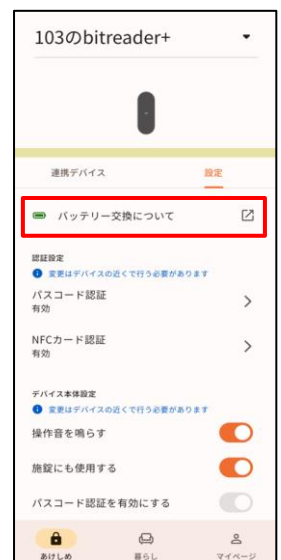

How to replace the battery of bitleader+

2

①Open the top of the device from left to right



②Lift up the knob and remove the battery case



※The battery used is CR123A. (Lithium batteries)



③After changing the battery, return the battery to the top of the device



④Close the top of the device>



⑤Touch the keypad to check



When replacing the battery of bitleader+, we recommend replacing the battery of bitlockMINI at the same time.

3

How to replace the battery of bitlock MINI

① Remove the front cover

② Slide the knob to the right to unlock the lock



③ Pull the knob forward and pull out the battery

※The battery used is CR123A. (Lithium batteries)



④ Change the battery, and put it in the device

⑤ Slide the knob to the left, and lock it.

⑥ Install the front cover

